

1. From the main menu, press 'VIEW' (Red)
2. Press 'BAT' (white) This shows the internal battery voltage
3. Press (Red) This shows the sensor head temperature
4. Press (Red) this shows the wet sensor status
HH 0 (dry status)
HH 1 (wet status)
5. With a dry wet sensor, pour water over it to see if the status changes from (0) to (1)
6. if no change, try cleaning the wet sensor with a soft wet paper towel and try again